
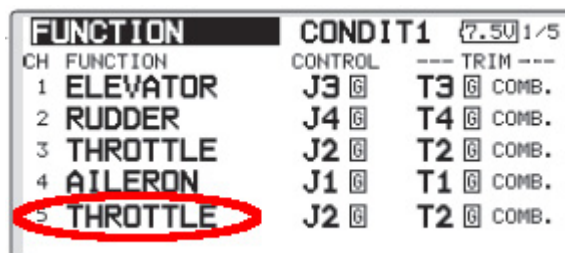
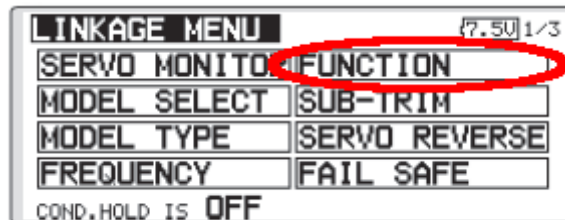


1. Transmitter channel settings for controlling the HiLOG unit (Futaba transmitter)



1.1. Plug the RX cable of the HiLOG unit to a free transmitter channel

1.2. Program the transmitter, set the free channel as Throttle

Turn on the transmitter (e.g. Futaba T12FG) and select the option „Linkage“ – „Function“. Set the function for the free channel (e.g. 5) to „Throttle“.

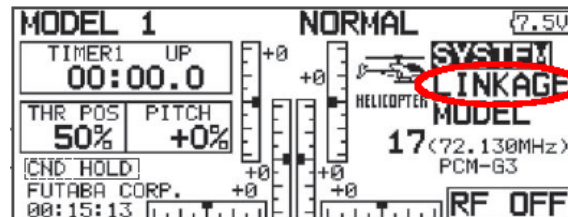

Perform the check using the „Servo Monitor“ option. Move the throttle lever to see whether the new channel (e.g. 5) changes as well.

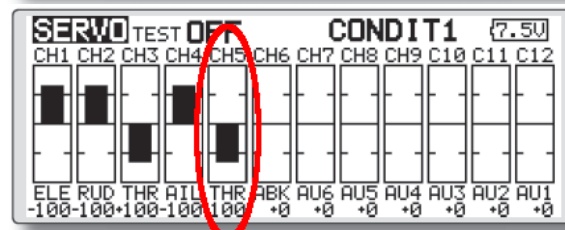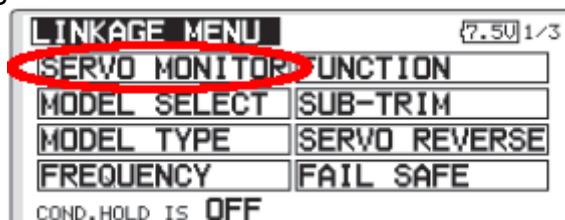

You do not have to set the channel „Reverse“. The HiLOG unit will calibrate the throttle lever using the application menu – Throttle channel settings.